



**TELEDYNE**  
**OLDHAM SIMTRONICS**  
Everywhereyoulook™

# USER MANUAL

## **AirAware**

STATIONARY GAS MONITOR



User Manuals in other languages are available on  
Website <https://teledynegasandflamedetection.com>



Copyright © January 2022 by TELEDYNE OLDHAM SIMTRONICS S.A.S.

All rights reserved. No reproduction of all or part of this document, in any form, is permitted without the written consent of TELEDYNE OLDHAM SIMTRONICS S.A.S.

All of the information that is provided in this document is accurate to the best of our knowledge.

As a result of continuous research and development, the specifications of this product may be changed without prior notice.

TELEDYNE OLDHAM SIMTRONICS S.A.S.

Rue Orfila

Z.I. Est – CS 20417

62027 ARRAS Cedex

Dear Valued Customer:

Thank you for buying and using the TELEDYNE OLDHAM SIMTRONICS AirAware™ Gas Monitor.

The AirAware™ can be relied upon for dependable service, day after day. It has been designed, manufactured, tested and proven under the most scrutinizing conditions possible. With the minimal care and maintenance described in this Instruction Manual, it will provide you with years of reliable monitoring.

We sincerely hope that you be pleased with the performance of the AirAware™ in the months and years ahead. We urge you to call us with any questions or comments you may have. Often times a phone call and a question can save you hours of frustration. Please do not hesitate to contact us at +33 (0)3 21 60 80 80.

All of us at TELEDYNE OLDHAM SIMTRONICS appreciate the opportunity to serve you.

# AirAware

STATIONARY GAS MONITOR  
USER MANUAL

# Table of Contents

Warnings and Cautionary Statements .....	1
Configurations .....	1
Unpacking The Instrument .....	2
Mounting & Installation .....	3
Wiring .....	4
Warm-Up And Operation.....	4
Set-up Mode .....	5
Bump Testing.....	7
Sensor Type .....	7
Low Alarm Set-up .....	8
High Alarm Set-up .....	8
4-20 On/Off** .....	8
4-20 mA Range** .....	9
Audio Enable/Disable** .....	9
Display On/Off.....	9
Display Type.....	10
Set Cal Gas Concentration .....	10
ModBus Address .....	10
Back To Normal Operation .....	11
Alarms.....	11



**ModBus Interface ..... 12**

**Bump (function) Testing ..... 13**

**Zeroing..... 13**

**Calibration..... 14**

**Sensor Replacement..... 15**

**Specifications ..... 17**

**Replacement Parts & Accessories ..... 18**

**Calibration Kits & Replacement Cylinders..... 19**

**Warranty ..... 20**

## Warnings and Cautionary Statements

Failure to perform certain procedures or note certain conditions may impair the performance of the instrument. For maximum safety and performance, please read and follow the procedures and conditions outlined below.



Sensor openings and water barriers must be kept clean. Obstruction of the sensor openings and/or contamination of the water barriers may cause readings to be lower than actual gas concentrations.

---

## Configurations

All versions include a bright 4 digit LED display as well as low and high visual alarm indication.

AirAware - Base part number 68100056-ABCDE.

- A = Sensor Gas Type
- B = On-Board Alarm Option
- C = Output Options
- D = Power Option
- E = Vanity / Faceplate Cover Option

### A - Gas Type

- 2 = Nitric Oxide (NO)
- 3 = Ammonia (NH<sub>3</sub>)
- 4 = Hydrogen Sulfide (H<sub>2</sub>S)
- 5 = Sulfur Dioxide (SO<sub>2</sub>)
- 6 = Nitrogen Dioxide (NO<sub>2</sub>)
- 7 = Chlorine (Cl<sub>2</sub>)
- A = Oxygen (O<sub>2</sub>)
- F = Hydrogen Chloride (HCl)

**B - On-Board**

0 = No audio alarm

1 = On-board audio alarm

**C – Output Options**

0 = None

1 = On-board relays

2 = 4-20mA output

3 = 4-20mA output and on-board relays

**D - Power Option**

0 = No output

1 = AC power adapter (installed)

**E - Vanity Plate (Faceplate Cover) Option**

0 = None

1 = Vanity plate

**Example:** 68100056-11211 means CO monitor with on-board audio alarm, a 4-20mA output, an AC power adapter (N.Am. Plug) and vanity cover.

## Unpacking The Instrument

The shipping box should contain the following items. Account for each item before discarding containers.

Quantity	Part Number	Description
1 each	6810 0056-XXXXX	AirAware Instrument
1 each	6700 1347	AirAware Instruction Manual

*Note: Bias sensors (HCl, NH<sub>3</sub>, NO) are not installed in instruments prior to shipment. Refer to Sensor Replacement section (page 15) for instructions.*

After unpacking, if any item listed is missing, contact either your local distributor of TELEDYNE OLDHAM SIMTRONICS products, or call TELEDYNE OLDHAM SIMTRONICS directly at +33 (0)3 21 60 80 80.




# Mounting & Installation

The mounting height of the AirAware is dependent on the gas being monitored and the source of the gas. General mounting guidelines are as follows:

Gas	Heavier Than Air	Similar To Air	Lighter Than Air
	Will collect in low lying areas 3' (1m) above floor	Breathing zone monitoring recommended 3'-6' (1-2m) above floor	Will collect in high areas 3' (1m) below ceiling
Ammonia (NH <sub>3</sub> )			☑
Carbon Monoxide (CO)		☑	
Chlorine (Cl <sub>2</sub> )	☑		
Hydrogen Chloride (HCl)		☑	
Hydrogen Sulfide (H <sub>2</sub> S)	☑		
Nitric Oxide (NO)	☑		
Nitrogen Dioxide (NO <sub>2</sub> )	☑		
Oxygen (O <sub>2</sub> )		☑	
Sulfur Dioxide (SO <sub>2</sub> )	☑		

With 5 conduit-type knockouts located around the outside edges as well as a back plate knockout for flush mounting, the AirAware offers maximum mounting flexibility. There is even provision for mounting on electrical outlets with 2" and 4" (North American) centers.

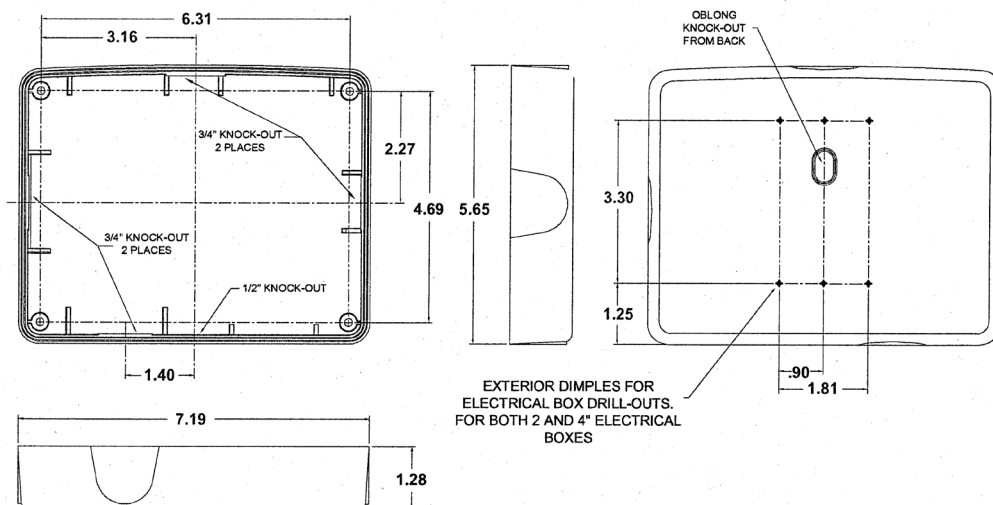


To insure there is no damage to the main electronics, it is recommended that the circuit board be removed prior to relieving a knockout or drilling through the pilot points for the flush mount option. Extreme caution should be taken when removing and re-installing the circuit board so as not to damage it.

## Wiring

Connect only to Class 2 power supply through approved conduit and enclosures in accordance with local authorities having jurisdiction.

Recommended Cable: 3 or 4 conductors (application dependent), 24 AWG, stranded tinned copper, shielded cable Belden #9842 or equivalent.

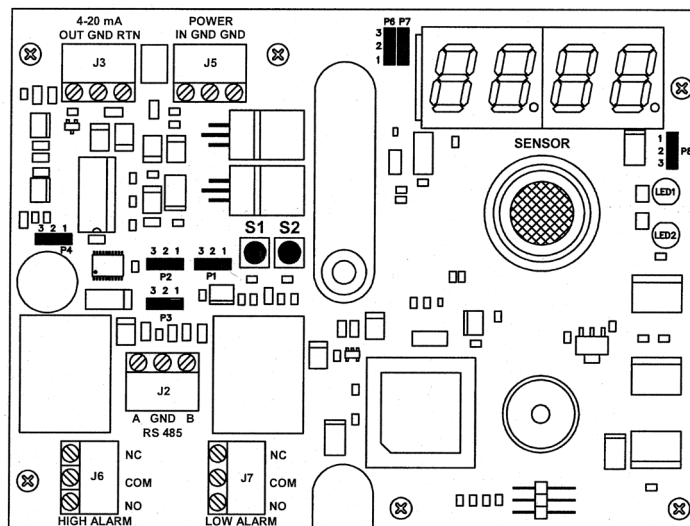

## Warm-Up And Operation

All AirAware versions operate on 12-24 VDC. The Monitor version includes a 120 VAC power pack for North American electrical sockets (not included in the International version) that supplies 24 VDC to the instrument.

Once powered, the instrument will go through an automatic self-test. During this time it will complete a full display segment test, brief audio and visual alarm test, software version, gas type, configuration M, C, T, CT (Note: "A" as an indicator of optional audio alarm) and finally a live continuous display of the gas concentration. During the first three minutes of operation the alarms will not activate and the 4-20 mA signal will be held at 3 mA (16 mA for O<sub>2</sub>). \* \* \*

Each AirAware utilizes electrochemical sensors that may require between 10 and 360 minutes (gas dependent) or 12-16 hours for NH<sub>3</sub> and HCl to stabilize when initially activated. During this warm-up period, the unit may display concentrations of gas and possibly alarm.

\*\*\* A flashing decimal point on the lower right corner of the display will appear for 3 minutes after start-up, calibration, bump, or programming. This is an indicator that the 4-20 mA signal is locked at 3 mA/16 mA and that all alarm functions are disabled. Once this flashing indicator clears, all functions will return to normal.

During normal operation, the LED display shows:



HCl	0.2 to 30.0 ppm in 0.1 ppm increments
Cl <sub>2</sub> , NO <sub>2</sub> , SO <sub>2</sub>	0.2 to 99.9 in 0.1 ppm increments
NH <sub>3</sub>	4 to 100 ppm in 1 ppm increments
CO, H <sub>2</sub> S, NO	0 to 999 ppm in 1 ppm increments
O <sub>2</sub>	0.0 to 30.0% by volume in 0.1% increments


## Set-up Mode



The AirAware™ is a very flexible gas-monitoring instrument with many options. Listed below are the various programming modes and procedures required to select various options.

1. In order to make programming changes, remove the optional vanity plate (if installed) from the face of the instrument by releasing the locking tabs.



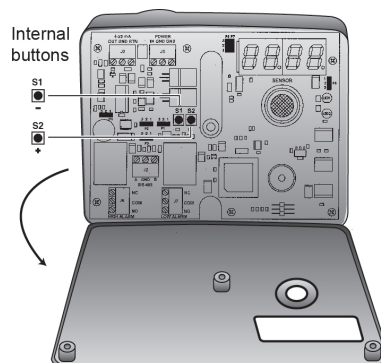



2. Loosen the 5 Phillips head (captive) screws on the faceplate allowing it to hinge downward to provide access to internal  or  buttons. (Labeled S1 and S2.)



- Press and hold both the  and  keys on instrument faceplate simultaneously for 5 seconds. "Bump" will appear in the display indicating the instrument is now in the Set-up Mode. At this point the alarm relays\* are disabled, audio alarms\* are disabled, and the current output\* locks at 3.0 mA for all gases except oxygen, which goes to 16.0 mA until set-up is complete. If no buttons are pressed within a 3-minute time period, the instrument reverts to normal operation.\*\*\*



- Pressing the  key will advance forward through the various options, while pressing the  key will step backward. The internal keys act as  or  buttons (Page 5) to set the actual set-up values or parameters.



\* Indication of purchase option.

\*\* Will not appear on menu if option not purchased.

\*\*\* A flashing decimal point on the lower right corner of the display will appear for 3 minutes after start-up, calibration, bump, or programming. This is an indicator that the 4-20 mA signal is locked at 3 mA and that all alarm functions are disabled. Once this flashing indicator clears all functions will return to normal.

Mode	Actions Taken
BUMP	Disables: <ul style="list-style-type: none"> <li>• Visual alarms</li> <li>• Audio alarm*</li> <li>• Relay contacts*</li> <li>• Freezes 4-20 mA current output*</li> </ul>
SENSOR TYPE	Display only of sensor type
LOW ALARM	Set values to activate: <ul style="list-style-type: none"> <li>• Low alarm visual indicator</li> <li>• On-board audible alarm*</li> <li>• Relay contact #1*</li> </ul>
HIGH ALARM	Set values to activate: <ul style="list-style-type: none"> <li>• High alarm visual indicator</li> <li>• On-board audible alarm*</li> <li>• Relay contact #2*</li> </ul>
4-20 mA ON-OFF**	Turn analog out put ON or OFF*
4-20 mA Range**	Custom scaling of 4-20 mA signal*

Mode	Actions Taken
AUDIO ON-OFF* *	Enable or disable on-board audible alarm* for gas alarms. Note: Fail and Fault conditions will always activate a pulsing audible alarm.
DISPLAY ON-OFF	Turn display ON or OFF when "ON".
DISPLAY TYPE	Select option for: <ul style="list-style-type: none"> <li>• "SAFE, LOW, HIGH".</li> <li>• "NUMERIC" when "ON".</li> </ul>
When "OFF"	Blank display during normal operation. Note: Decimal point illuminated in far left corner of display.
RELAY ENABLE/DISABLE* *	Turns Relays On/Off*
SET CAL GAS	Set the calibration gas value.
MODBUS ADDRESS	Set ModBus Address.
NORM	Return to normal operation mode.

Aborting the Set-up Mode is achieved at any time by pressing either the  or  key to select "NORM" and allowing the unit to sit for 5 seconds. Once in the normal run mode the alarm relays\*, audio alarms\* and 4-20 mA signal\* will be fully functional in 3 minutes.

## Bump Testing

This mode disables the audio\* and visual alarms, relay outputs\*, and freezes the analog output\* at 3.0 mA for all gases except oxygen, which goes to 16.0 mA. In this mode, the display alternates between "BUMP" and the actual gas reading every half-second for three minutes.

Once the display returns to the normal operation the audio\* and visual alarms, relay outputs\*, and current output\* will return to normal operation after an additional three minutes.

## Sensor Type

Identifies sensor type currently installed in instrument.

## Low Alarm Set-up

This adjustment affects the low alarm visual indicator, on-board audible alarm\* and low alarm relay contact\*.

When in the low alarm mode, the display scrolls "LOW ALARM XXXX" until either of the internal  $S_1$  or  $S_2$  buttons are pressed to alter the setting, or 3 minutes elapse, at which time the set-up mode is aborted and the unit returns to normal gas readings. "XXXX" indicates the current set point, and decimals are automatically placed as needed. If the  $S_1$  or  $S_2$  buttons are pressed during this 3-minute time, the display reverts to a continuous numeric reading, which indicates the new alarm setting. Five seconds after the last  $S_1$  or  $S_2$  keystroke, the scrolling message commences with the newly selected setting.

\* *Indication of purchase option.*

\*\* *Will not appear on menu if option not purchased.*

\*\*\* *A flashing decimal point on the lower right corner of the display will appear for 3 minutes after start-up, calibration, bump, or programming. This is an indicator that the 4-20 mA signal is locked at 3 mA and that all alarm functions are disabled. Once this flashing indicator clears all functions will return to normal.*

## High Alarm Set-up

This adjustment affects the high alarm visual indicator, on-board audible alarm\* and high alarm relay contact\*.

When in the high alarm mode, the display scrolls "HIGH ALARM XXXX" until either of the internal  $S_1$  or  $S_2$  buttons are pressed to alter the setting, or 3 minutes elapse, at which time the set-up mode is aborted and the unit returns to normal gas readings. "XXXX" indicates the current set point. Decimals are automatically placed as needed. If the  $S_1$  or  $S_2$  buttons are pressed during this 3-minute time, the display reverts to a continuous numeric reading, which indicates the new alarm setting. Five seconds after the last  $S_1$  or  $S_2$  keystroke the scrolling message commences with the newly selected setting.

## 4-20 On/Off\* \*

Allows user to turn the 4-20 output signal on or off as required.

## 4-20 mA Range \* \*

This adjustment affects 4-20 mA scaling.

The "4-20 mA Range" mode specifies a gas value, from 0 up to the full-scale range, which will represent a full-scale current loop output of 20mA. When in this mode, the display scrolls the message "RANGE XXX" until either of the internal  $S_1$  or  $S_2$  keys are pressed to alter the setting, or until a 3 minute timer expires, at which time the set-up modes are aborted and the unit returns to normal gas readings. "XXX" indicates the 20 mA range.

Decimals are automatically placed as needed. If the  $S_1$  or  $S_2$  buttons are pressed during this time, the display reverts to a continuous numeric reading, which indicates the changed setting. Five seconds after the last  $S_1$  or  $S_2$  keystroke, the scrolling message commences with the newly selected setting.

\* *Indication of purchase option.*

\*\* *Will not appear on menu if option not purchased.*

\*\*\* *A flashing decimal point on the lower right corner of the display will appear for 3 minutes after start-up, calibration, bump, or programming. This is an indicator that the 4-20 mA signal is locked at 3 mA and that all alarm functions are disabled. Once this flashing indicator clears all functions will return to normal.*

## Audio Enable/Disable \* \*

This adjustment affects on-board audible alarm.

The audio enable/disable mode specifies if the audio indicator will activate upon alarm. If disabled, all instances of audio activation will remain active (i.e. Fault and Fail) except for gas alarms. When in this mode, the display scrolls the message "AUDIO ON" or "AUDIO OFF" until either of the internal  $S_1$  or  $S_2$  buttons are pressed to alter the setting, or until a 3 minute timer expires, at which time the set-up mode is aborted and the unit returns to normal gas readings. If the  $S_1$  or  $S_2$  buttons are pressed during this time, the display reverts to a continuous text reading of "ON" or "OFF" which indicates the selected setting. Five seconds after the last  $S_1$  or  $S_2$  keystroke the scrolling message commences with the newly selected setting.

## Display On/Off

Allows user to turn the digital display on or off as required. If turned off a decimal point will be continuously illuminated in the bottom right corner of the display to indicate a power on condition. When "OFF" has been selected and the instrument is in the normal run mode, user access to the Set-up mode is achieved by following Set-up procedures.

## Display Type

This mode allows the user to select between numeric gas concentrations or a text indication of "SAFE, LOW, HIGH". When in this mode, the display scrolls the message "DISPLAY TEXT" or "DISPLAY NUMERIC" until either of the internal  $S^1$  or  $S^2$  buttons are pressed to alter the setting, or until a 3 minute timer expires, at which time the setup modes are aborted and the unit returns to normal gas readings. If the  $S^1$  or  $S^2$  buttons are pressed during this time, the display reverts to a continuous text reading of "TEXT" or "NUM" which indicates the selected setting. Five seconds after the last  $S^1$  or  $S^2$  keystroke the scrolling message commences with the newly selected setting.

## Set Cal Gas Concentration

Although factory set (see below) the calibration gas value can be user adjusted. When in this mode, the display scrolls the message "CAL GAS XXXX YYY ZZZ" until either of the internal  $S^1$  or  $S^2$  buttons are pressed to alter the setting, or until a 3 minute timer expires, at which time the setup modes are aborted and the unit returns to normal gas readings. If the  $S^1$  or  $S^2$  buttons are pressed during this time, the display reverts to XXXX which indicates the newly selected value. Five seconds after the last  $S^1$  or  $S^2$  keystroke the scrolling message commences with the newly selected setting.

- XXXX indicates the gas value.  
 YYY indicates the unit (ppm for toxics, %VOL for oxygen).  
 ZZZ indicates the gas type.

### Standard AirAware Calibration Settings

CO - 100 ppm	Cl2 - 10 ppm	HCl - 10 ppm
H2S - 25 ppm	NH3 - 25 ppm	NO - 25 ppm
NO2 - 5 ppm	O2 - 20.9%	SO2 - 5 ppm



## ModBus Address

Although factory set to the last 3 digits of the instrument serial number, the ModBus address can be user adjusted. When in this mode, the display shows the current address until either of the internal  $S^1$  or  $S^2$  buttons are pressed to alter the setting, or until a 3 minute timer expires, at which time the setup modes are aborted and the unit returns to normal gas readings.




If the **S1** or **S2** buttons are pressed during this time, the display reverts to XXXX which indicates the newly selected value. Five seconds after the last **S1** or **S2** keystroke the scrolling message commences with the newly selected setting.

## Back To Normal Operation

Immediately upon selecting Normal Mode, the display reads "NORM" for 5 seconds before exiting the Set-up mode. During this 5-second period, the user can continue to scroll forward or backward into other modes before the normal mode starts. After this point, both the  and  keys must be pressed to re-enter the Set-up mode.

## Alarms

Once the concentration of gas exceeds the preset alarm level, the AirAware will alarm. In all versions the visual alarm indicators will activate and the LED will flash once per second. For units with on-board audible alarm option, \* pressing  while the unit is in alarm will silence the on-board alarm buzzer.

All alarms are non-latching; when the level of gas drops below the alarm point, all alarms automatically switch off.

*\* Indication of purchase option.*

Although field programmable the factory alarm set points are as follows:

Gas	Low Alarm	High Alarm
CO	35 ppm	70 ppm
Cl2	0.5 ppm	1.0 ppm
H2S	10 ppm	20 ppm
HCl	5 ppm	10 ppm
NO	25 ppm	50 ppm
NO2	1 ppm	2 ppm
NH3	25 ppm	50 ppm
O2	19.5 % vol.	23.5% vol.
SO2	2 ppm	4 ppm

Frequent bump testing along with good record keeping will ensure optimum performance of the AirAware.

## Alarm Conditions for Different Configurations

	Monitor	Control	Transmit	Control/transmit
Low Alarm	Flashing "LOW" indicator Low Alarm Audible Alarm *	Flashing "LOW" indicator Low Alarm relay switched	Low Alarm relay switched mA signal proportional to display	Flashing "LOW" indicator Low Alarm relay switched mA signal proportional to display
High Alarm	Flashing "HIGH" indicator High Alarm Audible Alarm *	Flashing "HIGH" indicator High Alarm relay switched	Flashing "HIGH" indicator mA signal proportional to display	Flashing "HIGH" indicator High Alarm relay switched mA signal proportional to display
Zero Failure	Flashing Display Pulsing Audio Alarm *	Flashing Display Pulsing Audio Alarm *	Flashing Display Pulsing Audio Alarm * mA signal at old value	Flashing Display Pulsing Audio Alarm * mA signal at old value
Instrument Failure	Flashing Display Pulsing Audio Alarm *	Flashing Display Pulsing Audio Alarm *	Flashing Display Pulsing Audio Alarm * mA signal at 0 mA	Flashing Display Pulsing Audio Alarm * mA signal at 0 mA
No Sensor Installed	Flashing Display Pulsing Audio Alarm *	Flashing Display Pulsing Audio Alarm *	mA signal at 0 mA Pulsing Audio Alarm *	mA signal at 0 mA Pulsing Audio Alarm *
Open mA Loop			mA signal at 0 mA Pulsing Audio Alarm *	mA signal at 0 mA Pulsing Audio Alarm *
Shorted mA Loop			mA signal at 0 mA Pulsing Audio Alarm *	mA signal at 0 mA Pulsing Audio Alarm *

## ModBus Interface

The AirAware is a ModBus RTU compliant instrument. Please consult the factory for detailed information of ModBus registers and settings for board jumpers P1, P2 and P3.

## Bump (function) Testing

Bump (function) testing is the act of applying a known concentration of gas to the monitor and verifying that the instrument is performing properly. There are two common philosophies when it comes to BUMP or FUNCTION testing.

- a) Applying gas to the instrument while in the normal run mode and awaiting a response within the allotted time is easily achieved. When applying gas through the calibration adapter, the unit should respond to 90% of the reading within 2-3 minutes (sensor specific).



At this point all on-board and remote alarms should be activated and the 4-20 mA signal should reflect the display reading on the instruments.

- b) If a test of the sensor and display only is required without the activation of on-board or external alarming devices, selecting the "BUMP" option in the Set-up mode disables all alarming functions. At this point, the alarm relays\* are disabled, audio alarms\* are disabled and the current output\* locks at 3.0 mA for all gases except oxygen, which goes to 16.0 mA. Instrument automatically returns to normal operation.

If an instrument fails to operate properly following any bump "functional" test, a full instrument calibration should be performed prior to use. Refer to Section 11 (Calibration) for details.

Test gas kits for all gases, including oxygen, are available from TELEDYNE OLDHAM SIMTRONICS; see page 19 for ordering information.


## Zeroing

Zeroing an AirAware is the act of setting the instrument to read either 000 ppm or 00.0 ppm (20.9 for oxygen) in a gas/hazard-free environment. The atmosphere must be clean and free from the target gas during the zeroing process.

If through ventilation and other measures it is impossible to entirely remove the target gas from your facility, bottled "zero" gas should be applied to the instrument.

Connect the zero gas bottle, regulator, and tubing to the calibration adapter. Connect adapter to sensor opening and open regulator. Allow zero gas to flow for a minimum of 2 minutes.



With the "zero" gas still flowing to the sensor, press and hold the  key for a total of 10 seconds. During the first 5 seconds the normal screen is still displayed. During the next 5 seconds, the text or numeric display flashes once per second. If the key is still held after the full 10 seconds the word "ZERO" is displayed.

\*\*\* *A flashing decimal point on the lower right corner of the display will appear for 3 minutes after start-up, calibration, bump, or programming. This is an indicator that the 4-20 mA signal is locked at 3 mA and that all alarm functions are disabled. Once this flashing indicator clears, all functions will return to normal.*

Release the key and the zeroing process begins. At the end of the zero process, the word "PASS" or "FAIL" is displayed for 5 seconds along with a .25 second audible beep, after which time the unit reverts to the normal reading screen. An oxygen sensor will always be zeroed to 20.9%, regardless of what the span gas is set to, and no span reserve is shown for oxygen during zeroing.

If the unit displays "FAIL" try again ensuring the area is free of the target gas. If the unit fails a second time the sensor may need to be replaced. Contact TELEDYNE OLDHAM SIMTRONICS for a replacement sensor; see page 18 for ordering information.

## Calibration



TELEDYNE OLDHAM SIMTRONICS recommends that a full instrument calibration be performed using a certified concentration(s) of TELEDYNE OLDHAM SIMTRONICS branded calibration gas(es) quarterly to ensure maximum accuracy. Use of calibration gases from manufacturers other than TELEDYNE OLDHAM SIMTRONICS may void product warranties and limit liability claims against the manufacturer.

Calibrating the AirAware is simply applying a known concentration of gas to the unit, and "telling" the unit to self-adjust to read that concentration. The calibration values are pre-programmed into the instrument in order to simplify the procedure. For details on changing this pre-programmed value, refer to page 10.

### Standard AirAware Calibration Settings

CO - 100 ppm	Cl2 - 10 ppm	HCl - 10 ppm
H2S - 25 ppm	NH3 - 25 ppm	NO - 25 ppm
NO2 - 5 ppm	O2 - 20.9%	SO2 - 5 ppm

To calibrate the instrument:

- If necessary, connect zero air gas bottle, regulator and tubing to the calibrator adapter.
- Press and hold the  button. After 5 seconds, the display will blink five times and "Zeroing" will appear on the display. Release the  button.

- After the unit finishes auto-zeroing, it will display either PASS or FAIL. If the sensor passes the zeroing function, switch gas cylinder and connect the calibration adapter to the sensor opening and start the flow of gas to the sensor by opening the regulator. Maintain the flow of gas to the sensor until the display indicates "PASS XXX" or "FAIL". During this time the display will flash the SPAN RESERVE value of the sensor. Once calibration is complete, the display will flash "PASS XXXX" or "FAILED".
- If the unit indicates "PASS XXX," document the XXX (span reserve) value in your calibration records. Remove calibration gas and disassemble regulator from cylinder.\*\*\*
- If the unit indicates "FAIL," the display will alternate between "FAIL" and actual readings. The audible alarm will sound every 1/2 second and the 4-20 mA signal will reflect displayed readings.\*\*\*

Check the following if the unit indicates:

- "Fail".
- Calibration gas cylinder concentration matches the pre-programmed calibration gas settings in the "Set-up" mode.
- Calibration gas cylinder is not empty.

\*\*\* A flashing decimal point on the lower right corner of the display will appear for 3 minutes after start-up, calibration, bump, or programming. This is an indicator that the 4-20 mA signal is locked at 3 mA and that all alarm functions are disabled. Once this flashing indicator clears, all functions will return to normal.

If the unit fails a second time the sensor may need to be replaced. Contact either your local distributor of TELEDYNE OLDHAM SIMTRONICS instruments or directly.

---

*NOTE: Use only TELEDYNE OLDHAM SIMTRONICS test gas equipment.*

---


## Sensor Replacement

Occasionally, AirAware sensors will need to be replaced. Repeated failures of zero, calibration, and bump tests can be indications that the sensor has degraded. Replacement sensors are available from authorized TELEDYNE OLDHAM SIMTRONICS distributors. Refer to page 18, Replacement Sensors and Accessories, for part numbers.


To replace a sensor in the AirAware:

- Remove power from the unit.
- Remove the optional vanity plate (if installed) from the face of the instrument by releasing the locking tabs (page 5).
- Loosen the 5 Phillips head (captive) screws on the faceplate allowing it to hinge downward (page 8).

- Unplug the used sensor and discard.

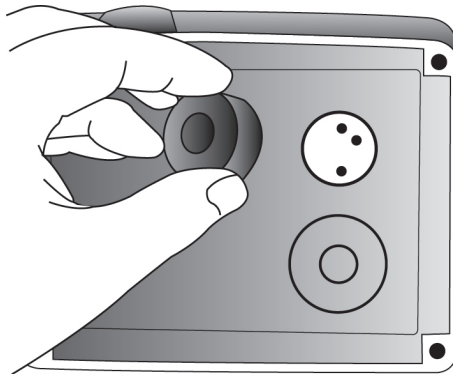

- Remove the shorting clip or small bias circuit board from the replacement sensor, aligning the holes in the board with the pins on the sensor; plug the new sensor into the instrument.

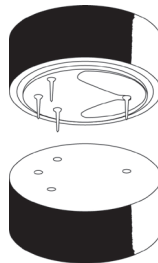

- Replace cover, and reapply power.

Once powered, the display will briefly show the symbol for the gas being monitored, then a live display of the gas concentration. Each AirAware utilizes electrochemical sensors that may require between 10 and 360 minutes (gas dependent) or 12-16 hours for NH<sub>3</sub> and HCl to stabilize when initially activated. During this warm-up period, the unit may display concentrations of gas and possibly alarm. Allow sufficient time for the instrument to stabilize prior to proceeding.

# Specifications

Size:	7.2" x 5.6" x 1.6" (18.29 cm x 14.22 cm x 4.06 cm)
Weight:	17 oz. (482 grams)
Display:	4 digit high resolution bright led
Relay Rating:	Two 5-amps 30 VDC, NO and NC
Analog Output:	<ul style="list-style-type: none"> <li>• 4-20 mA three-wire interface</li> <li>• 200-1000 ohms @ 24 VDC</li> <li>• 100-500 ohms @ 12 VDC</li> </ul>
Current Draw:	<ul style="list-style-type: none"> <li>• 125 mA @ 24 VDC</li> <li>• 200 mA @ 12 VDC</li> </ul>
Digital Output:	ModBus RTU, RS485
Temperature Range of Operation:	-4°F to 122°F (-20°C to 50°C) Sensor Dependent
Relative Humidity Range:	<ul style="list-style-type: none"> <li>• 15-90% for Toxics</li> <li>• 0-99% for Oxygen</li> </ul>
Measuring Range:	<ul style="list-style-type: none"> <li>• HCl - 0.2 to 30.0 ppm in 0.1 ppm increments</li> <li>• Cl<sub>2</sub>, NO<sub>2</sub>, SO<sub>2</sub> - 0.2 to 99.9 in 0.1 ppm increments</li> <li>• NH<sub>3</sub> - 4 to 100 ppm in 1 ppm increments</li> <li>• CO, H<sub>2</sub>S, NO - 0 to 999 ppm in 1 ppm increments</li> <li>• O<sub>2</sub> - 0.0 to 30.0% by volume in 0.1% increments</li> </ul>
Power:	12 - 24 VDC (120 VAC to 24 VDC, optional item)
Audio Alarm:	85 db at 1 meter
Certification Data:	CSA - C.22.2 No. 205-M 1983 (non-hazardous locations)

*Subject to change without notice.*

## Replacement Parts & Accessories

TELEDYNE OLDHAM SIMTRONICS offers a wide selection of options necessary for optimum AirAware performance. Supplies available for the AirAware include external audible and visual alarms, calibration kits, vanity plates, controllers and many more. Call for available options for your specific configuration.

### Replacement Parts and Accessories

Part No.	Description
67001198	Vanity plate (option)
67000596	Calibration adapter (adapter only)
67000604	Calibration adapter assembly (includes cal adapter, tubing and reducer)
17106659	Replacement sensor gasket
77021897	Replacement water barrier for sensor opening
67000265	120 VAC to 24 VDC power adapter (North American wall plug)
17099391	Nylon strain relief for AC power adapter
67001123	Replacement Faceplate Screw
67001115	Replacement Faceplate/Keypad
67001131	Replacement Faceplate Hinge Strap
77024354	Replacement RFI screen
77022051	Replacement sensor seal

### Replacement Sensors

Part No.	Description
77040009	Ammonia Sensor (NH <sub>3</sub> )
6798301	Carbon Monoxide Sensor (CO)
17077330	Chlorine Sensor (Cl <sub>2</sub> )
17066374	Hydrogen Chloride Sensor (HCl)
17033960	Hydrogen Sulfide Sensor (H <sub>2</sub> S)
17071242	Nitric Oxide Sensor (NO)
17060591	Nitrogen Dioxide Sensor (NO <sub>2</sub> )
17050129	Oxygen Sensor (O <sub>2</sub> )
17060575	Sulfur Dioxide Sensor (SO <sub>2</sub> )



## Calibration Kits & Replacement Cylinders

TELEDYNE OLDHAM SIMTRONICS offers a wide selection of calibration kits and regulators necessary for optimum AirAware performance. Call for available options for your specific configuration.

### Calibration Kits

Part No.	Description
18102147	Ammonia Cal Kit (25 PPM 58 liter)
18100743	Carbon Monoxide Cal Kit (100 PPM 34 liter)
18101741	Chlorine Cal Kit (10 PPM 58 liter)
18102148	Hydrogen Chloride Cal Kit (10 PPM 58 liter)
18100842	Hydrogen Sulfide Cal Kit (25 PPM 58 liter)
18102238	Nitrogen Dioxide Cal Kit (5 PPM 58 liter)
68100221	Oxygen / Zero Air Cal Kit (20.9% O <sub>2</sub> 34 liter)
18102239	Sulfur Dioxide Cal Kit (5 PPM 58 liter)
18102150	Nitric Oxide Cal Kit (25 PPM, 58 liter)

### Replacement Cylinders for Calibration Kits

Part No.	Description
18102151	Ammonia Replacement CYL (25 PPM 58 liter)
18100701	Carbon Monoxide Replacement CYL (100 PPM 34 liter)
18101758	Chlorine Replacement CYL (10 PPM 58 liter)
18102154	Hydrogen Chloride Replacement CYL (10 PPM 58 liter)
18100859	Hydrogen Sulfide Replacement CYL (25 PPM 58 liter)
18102219	Nitrogen Dioxide Replacement CYL (5 PPM 58 liter)
18102222	Sulfur Dioxide Replacement CYL (5 PPM 58 liter)
18100693	Oxygen / Zero Air Replacement CYL (20.9% O <sub>2</sub> 34 liter)
18102153	Nitric Oxide Replacement CYL (25 PPM 58 liter)

*Calibration kits include gas cylinder, 0.5 LPM regulator and carry case.*

*Note: Calibration cup not included.*

*Urethane tubing required for SO<sub>2</sub>, Cl<sub>2</sub>, NO<sub>2</sub>, NH<sub>3</sub>, HCl and HCN gases*

## Warranty

AirAware Gas Monitors are warranted to be free from defects in material and workmanship for eighteen (18) months from the date of shipment, or one (1) year from the date of first use, whichever occurs first, except where otherwise stated in writing in TELEDYNE OLDHAM SIMTRONICS literature accompanying the product. The above warranty does not include sensors, battery packs, internal pumps or filters, all of which are warranted to be free from defects in material and workmanship for eighteen months from the date of shipment, or one year from the date of first use, whichever occurs first, except where otherwise stated in writing in TELEDYNE OLDHAM SIMTRONICS literature accompanying the product.

## LIMITATION OF LIABILITY

TELEDYNE OLDHAM SIMTRONICS MAKES NO OTHER WARRANTIES, EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSE. SHOULD THE PRODUCT FAIL TO CONFORM TO THE ABOVE WARRANTY, BUYER'S ONLY REMEDY AND TELEDYNE OLDHAM SIMTRONICS'S ONLY OBLIGATION SHALL BE, AT TELEDYNE OLDHAM SIMTRONICS'S SOLE OPTION, REPLACEMENT OR REPAIR OF SUCH NONCONFORMING GOODS OR REFUND OF THE ORIGINAL PURCHASE PRICE OF THE NONCONFORMING GOODS.

IN NO EVENT WILL TELEDYNE OLDHAM SIMTRONICS BE LIABLE FOR ANY OTHER SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING LOSS OF PROFIT OR LOSS OF USE, ARISING OUT OF THE SALE, MANUFACTURE OR USE OF ANY PRODUCTS SOLD HEREUNDER WHETHER SUCH CLAIM IS PLEADED IN CONTRACT OR IN TORT, INCLUDING STRICT LIABILITY IN TORT.

It shall be an express condition to TELEDYNE OLDHAM SIMTRONICS's warranty that all products be carefully inspected for damage by Buyer upon receipt, be properly calibrated for Buyer's particular use, and be used, repaired, and maintained in strict accordance with the instructions set forth in TELEDYNE OLDHAM SIMTRONICS's product literature. Repair or maintenance by nonqualified personnel will invalidate the warranty, as will the use of non-approved consumables or spare parts. As with any other sophisticated product, it is essential and a condition of TELEDYNE OLDHAM SIMTRONICS's warranty that all personnel using the products be fully acquainted with their use, capabilities and limitations as set forth in the applicable product literature.

Buyer acknowledges that it alone has determined the intended purpose and suitability of the goods purchased. It is expressly agreed by the parties that any technical or other advice given by TELEDYNE OLDHAM SIMTRONICS with respect to the use of the goods or services is given without charge and at Buyer's risk; therefore, TELEDYNE OLDHAM SIMTRONICS assumes no obligations or liability for the advice given or results obtained.





**TELEDYNE**  
**OLDHAM SIMTRONICS**  
Everywhereyoulook™



**AMERICAS**

14880 Skinner Rd  
CYPRESS  
TX 77429,  
USA  
Tel.: +1-713-559-9200

**EMEA**

Rue Orfila  
Z.I. Est – CS 20417  
62027 ARRAS Cedex,  
FRANCE  
Tel.: +33 (0)3 21 60 80 80

**ASIA PACIFIC**

Room 04, 9th Floor, 275  
Ruiping Road, Xuhui District  
SHANGHAI  
CHINA  
Tel.: +86-134-8229-5057

[www.teledynegasandflamedetection.com](http://www.teledynegasandflamedetection.com)



© 2022 TELEDYNE OLDHAM SIMTRONICS. All right reserved.  
6700-1347 - Revision 7.0 / January 2022